
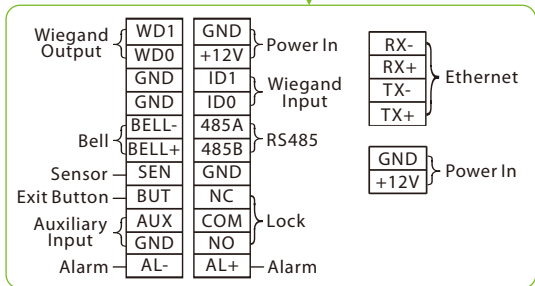


Quick Start Guide

SpeedFace-V4L Pro Series

Version: 1.0

1 Overview

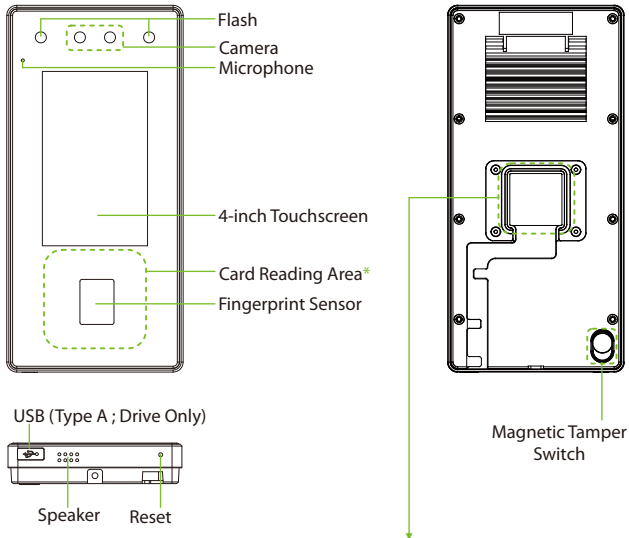

Note:

- To ensure the accuracy of fingerprint recognition, please remove the fingerprint sensor protective film before using your fingerprint.
- Not all products have the function with *, the real product shall prevail.

2 Installation Environment

Please refer to the following recommendations for installation:



INSTALL INDOORS ONLY



AVOID INSTALLATION NEAR GLASS WINDOWS




AVOID DIRECT SUNLIGHT AND EXPOSURE





AVOID USE OF ANY HEAT SOURCE NEAR THE DEVICE

- Avoid direct contact to sunlight for a long time.
- Protect the device from moisture, water, and rain.
- Handle the device with care.
- Make sure that the device is not installed in close proximity to a sea or other environments where metal oxidation and rust may occur if the device is exposed for a long time.
- Protect the device from lightning.
- Make sure that the device is not working in an acidic or alkaline environment for a long time.



3 Standalone Installation

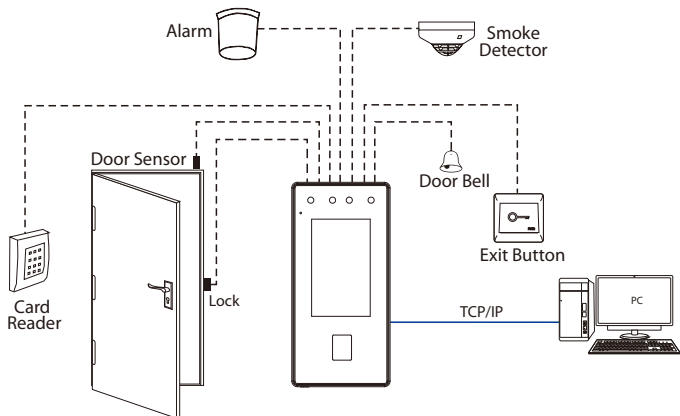


4 Door Bell, Exit Button and Alarm Connection

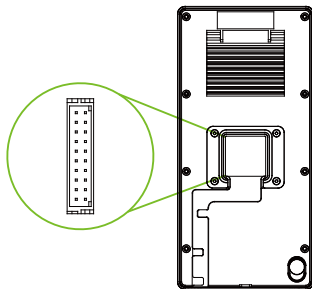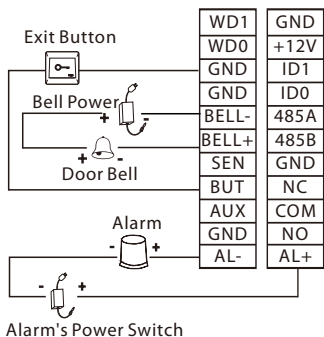

5 Door Sensor and Smoke Detection Connection

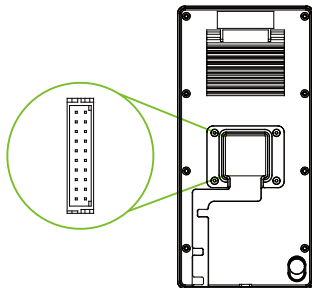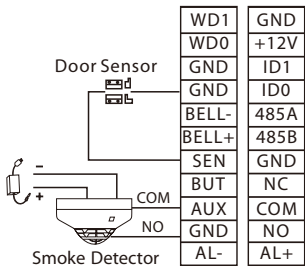


6 Power Connection

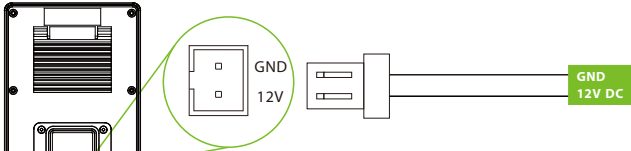


Recommended Power Supply:

- 12V \pm 10%, at least 3000mA.
- To share power with other devices, use a power supply with higher current ratings.

7 RS485 and Wiegand Connection

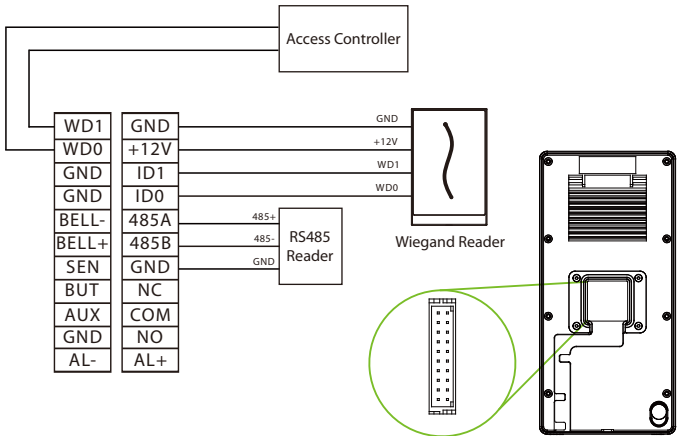

8 Ethernet Connection

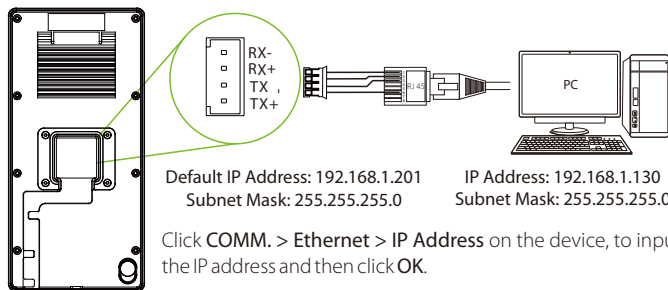


9 Lock Relay Connection


The system supports Normally Opened Lock and Normally Closed Lock.

The NO LOCK (Normally opened at Power On) is connected with "NO1" and "COM" terminals, and the NC LOCK (Normally closed at Power On) is connected with "NC1" and "COM" terminals. Take NC Lock as an example below:

Device not sharing power with the lock:

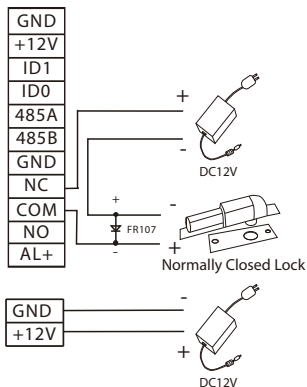

Device sharing power with the lock:



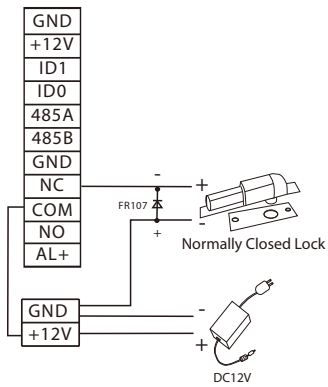


10 User Registration



When there is no super administrator set in the device, click on ☰ to enter the menu. Add a new user, set their User Role to Super Admin, and the system will request administrator verification before granting access to the menu. It is strongly recommended to register a super administrator initially for security purposes.

Method 1: Register on the Device

Click on ☰ > **User Mgt.** > **New User** to register a new user. The options include entering the User ID and Name, Setting User Role, Registering Fingerprint, Face, Card Number*, Password and Adding Profile Photo.

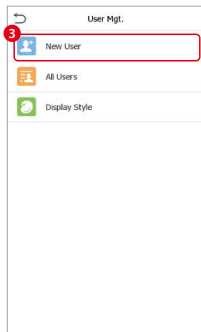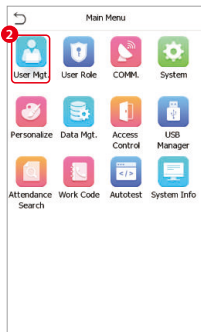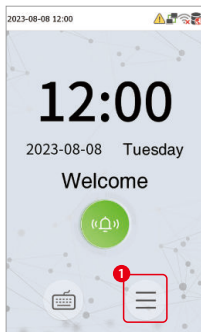

New User	
User ID	2
Name	
User Role	Normal User
Fingerprint	0
Face	0
Card	0
Password	
Profile Photo	0
Access Control Role	

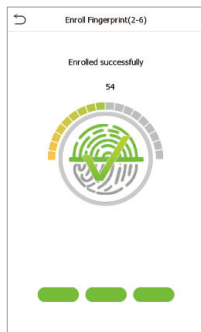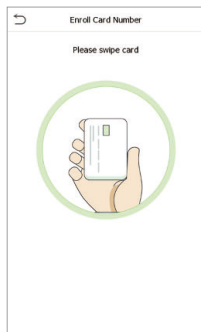

Method 2: Register on ZKBio CVAccess Software

● Register on the PC

Please set the IP address and cloud service server address, in the Comm. Menu option on the device.

1. Click **Access > Access Device > Device > Search** to search the device on the software. When an appropriate server address and port are set on the device, the searched devices are displayed automatically.

The screenshot displays the 'Access / Access Device / Device' interface. At the top, there are input fields for 'Device Name', 'Serial Number', and 'IP Address'. Below these is a toolbar with icons for Refresh, New, Delete, Export, Search, Control, Set up, View / Get, and Communication. A 'Search' dialog box is open, showing a search bar and a table of results. The table has columns for IP Address, MAC Address, Subnet Mask, Gateway Add..., Serial Number, Device Type, Set Server, and Operation. One device is listed with IP 192.168.137.32, MAC 255.255.255.0, Subnet 192.168.137.1, Gateway 7273212700020, Device Type RevFace 19, and an 'Add' button in the Operation column. An 'Add' dialog box is also open, with fields for Device Name (192.168.137.32), Icon Type (Door), Area (Area Name), and Add to Level. A warning message states: '[Clear Data in the Device when Adding] will delete data in the device (except event record), please use with caution!'. The dialog has 'OK' and 'Cancel' buttons.

Step 1: Click the Search button in the toolbar.

Step 2: Enter the IP address in the search bar.

Step 3: Click the Add button in the Operation column of the search results table.

Step 4: Click the OK button in the Add dialog box.


2. Click **Add** in an operation column, a new window will pop-up. Select Icon type, Area, and Add to Level from each dropdowns and click **OK** to add the device.
3. Click **Personnel > Person > New** and fill in all the required fields to register new users in the software.
4. Click **Access > Device > Control > Synchronize All Data to Devices** to synchronize all the data into the device including the new users.

For more details, please refer to the *ZKBio CVAccess User Manual*.


● Register on the Phone

Once the ZKBio CVAccess software is installed, the users could enroll their face template via a browser application on their own mobile phone.

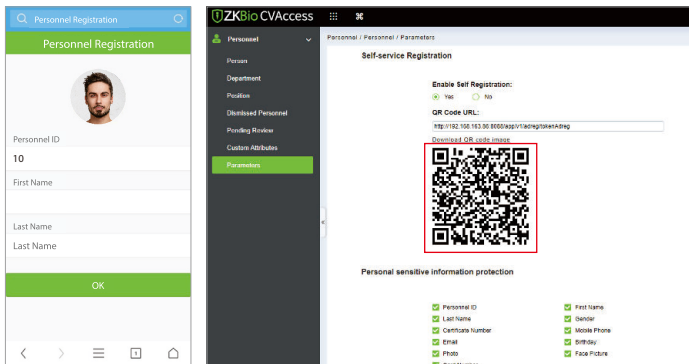

1. Click **Personnel > Parameters**, input "http://Server address:Port" in the QR Code URL. The software will automatically generate a QR code. To register users, scan the QR code or log in at 'http://ServerAddress:Port/app/v1/adreg' using a mobile phone.



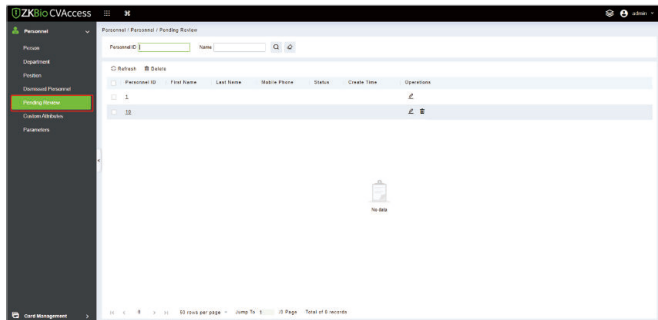







2. The users will be displayed in **Personnel > Pending Review**.



11 Ethernet and Cloud Server Settings

Click on  > **COMM.** > **Ethernet** to set the network parameters. If the TCP/IP communication of the device is successful, the icon  will be displayed in the upper right corner of the standby interface.

Click on  > **COMM.** > **Cloud Server Settings** to set the server address. If the device communicates with the server successfully, the icon  will be displayed in the upper right corner of the standby interface.

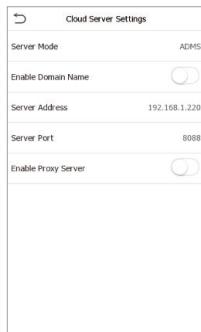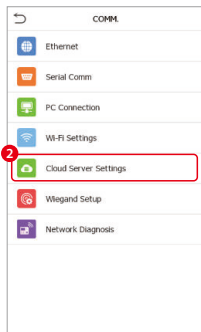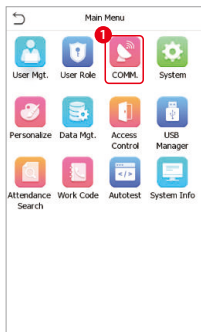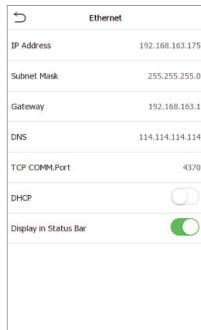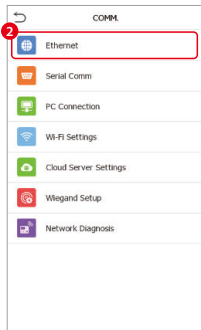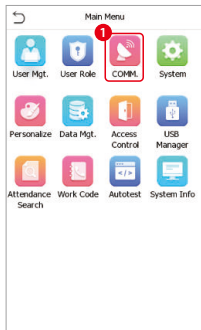

12 Connecting to ZKBio Zlink App

Click on ☰ > **System** > **Device Type Setting** to change the device communication protocol to the BEST protocol, the device can then be managed by ZKBio Zlink.


Step 1: Download the App

Search for the **ZKBio Zlink** App in Apple App Store or Google Play Store and download the App into your smartphone.




Step 2: Create Your Account

Open the **ZKBio Zlink** App and create an account with your phone number or an Email ID.

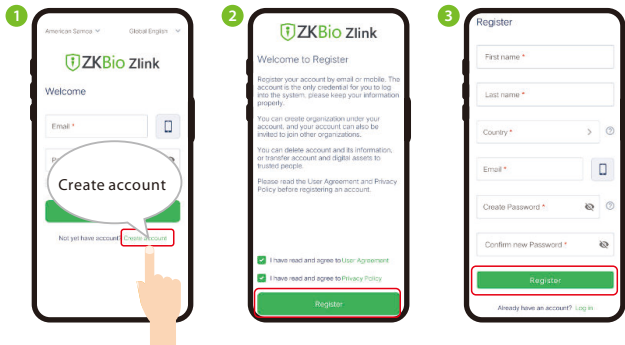


Step 3: Create the Organization

Log in with your successfully registered account and follow the page prompts to create an organization.

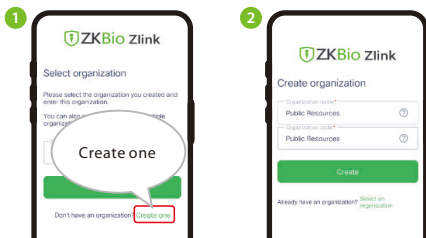


Step 4: Add the Site and Zone

Log in with your created account and organization. After a successful login, add **Site** and **Zone** in the **Me** interface.

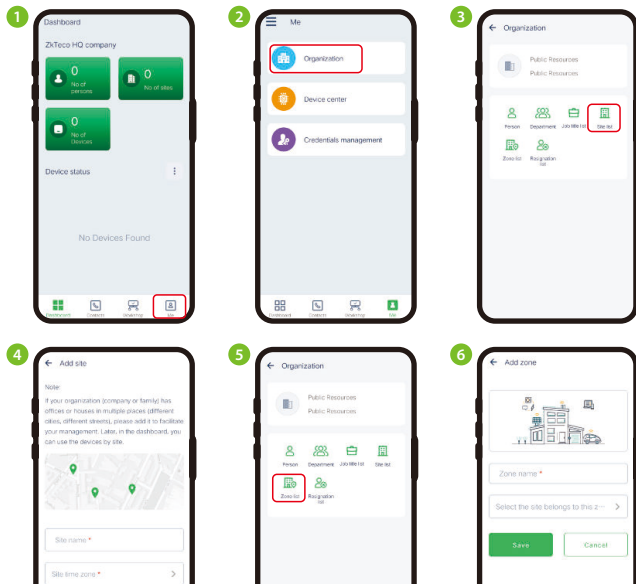


Step 5: Binding the Device

In Workshop interface, click CloudACC > Me > Device List to add devices.

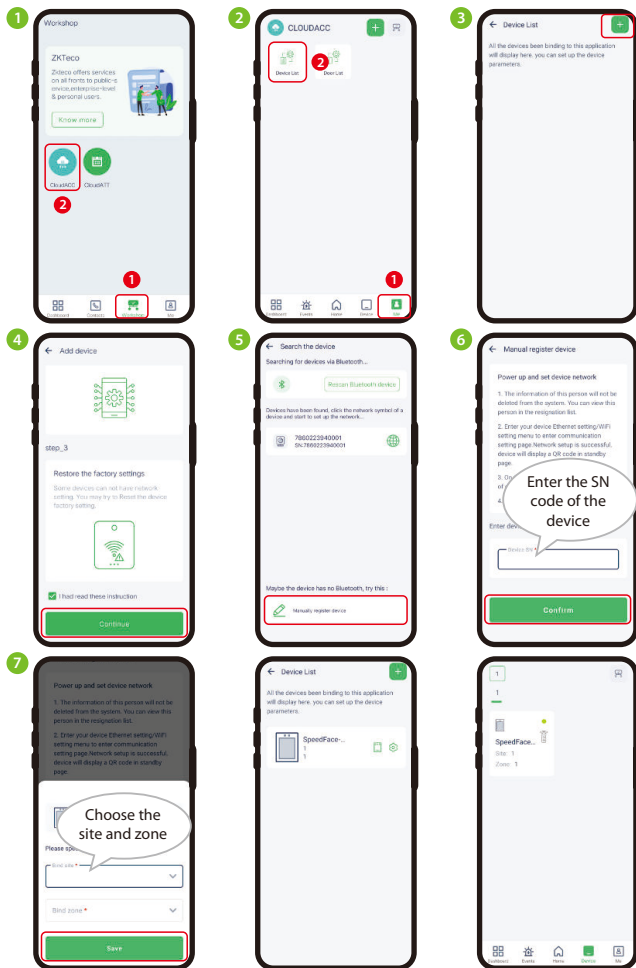


13 Connecting to ZKBio Zlink Web


After successfully adding devices using the ZKBio Zlink App, you can use the created account to access the ZKBio Zlink Web. With this web interface, you can find devices, add new personnel, register verification methods for registered personnel, synchronize personnel to devices, and query records. To access the ZKBio Zlink Web, please visit <https://zlink.minervaiot.com/>.

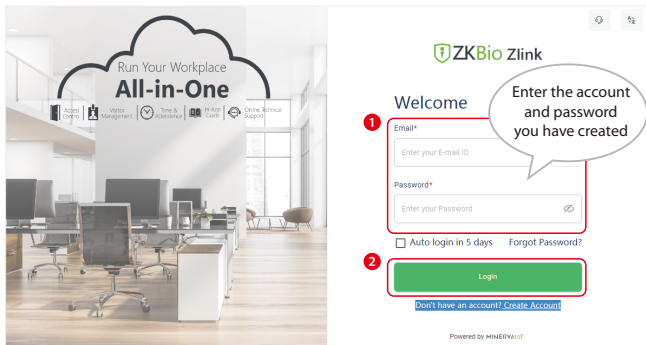


Add Person:

1. Click **Me > Organization** on the ZKBio Zlink Web main menu to add a person.

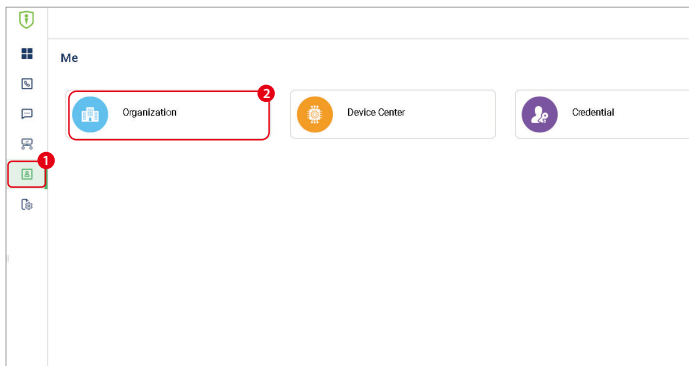


2. Click add icon  to add a new person. Enter the person's information, and click **Save**.

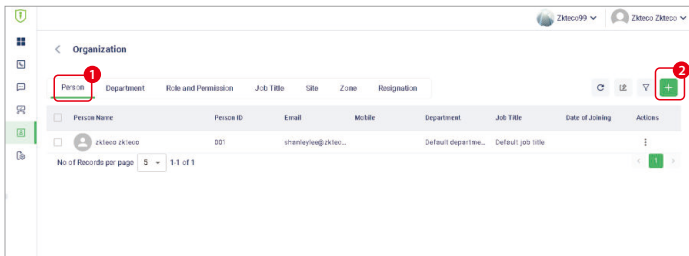


Synchronize Persons to Device:

1. Click **Workshop** > **CloudACC** on the ZKBio Zlink Web main menu.

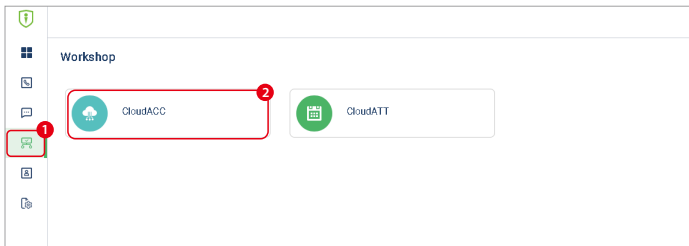

2. Click **Access Control** > **Group Access Time** > **Manage Door** icon  to choose the device.

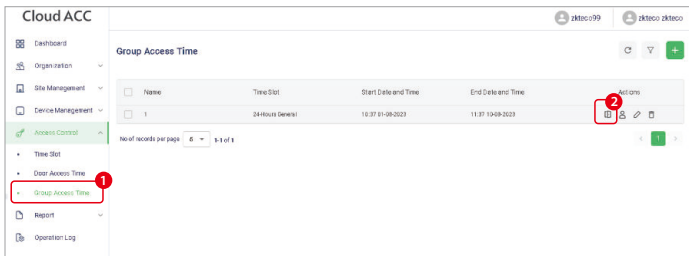

Cloud ACC zkteco99 zkteco zkteco

Dashboard
Organization
Site Management
Device Management
Access Control
Time Slot
Door Access Time
Group Access Time
Report
Operation Log

< Manage Door +

Door Name	Device Name	Device Serial Number	Door Number	Verifier Mode	Actions
Door-1	SpecFaceV4L Pro	825723243035	1		

No. of records per page 5 1 of 1

Cloud ACC zkteco99 zkteco zkteco

Dashboard
Organization
Site Management
Device Management
Access Control
Time Slot
Door Access Time
Group Access Time
Report
Operation Log

< Add Door +

Door Name	Device Name	Device Serial Number	Door Number	Enable/Disable	Verifier Mode
Door-1	SpecFaceV4L Pro	825723243035	1	✓	

No. of records per page 5 1 of 1

Add Clear

3. Click **Access Control > Group Access Time > Manage Person** icon  to choose persons for synchronization to this device.

Cloud ACC zkteco99 zkteco zkteco

Dashboard
Organization
Site Management
Device Management
Access Control
Time Slot
Door Access Time
Group Access Time
Report
Operation Log

Group Access Time +

<input type="checkbox"/>	Name	Time Slot	Start Date and Time	End Date and Time	Actions
<input type="checkbox"/>	1	24 Hours General	10:37 01-06-2023	11:37 10-09-2023	+ + +

No. of records per page 5 1 of 1

Cloud ACC zkteco99 zkteco zkteco

Dashboard
Organization
Site Management
Device Management
Access Control
Time Slot

< Manage Person +

First Name	Last Name	Person ID	Actions
Mite	Mite	1	

No. of records per page 5 1 of 1

Cloud ACC zkteco99 zkteco zkteco


< Add Person 🔄 ⌵

First Name	Last Name	Title	Person ID
Mike		Mike	1
zkteco	zkteco		301

No. of records per page: 5 1-2 of 2



 
Add Clear

Register Verification Mode:

After successfully synchronizing persons to the device, you can view their basic information in the **Person in the device** interface. Click **Workshop > CloudACC > Device Management > Device > Persons in the Device** icon , click the relevant biometric function icon (Fingerprint/Face/Password/Card) to remotely register the Personnel Biometric Identification Method.

Cloud ACC zkteco99 zkteco zkteco

Device 🔄 ⌵ + Add Device

Device Name	Serial Number	IP Address	Device Model	Firmware Version	Status	Actions
SpeedFace-V4L Pro	8907232349035	192.168.163.175	SpeedFace-V4L Pro	ZSM18E4F15V5/V4V5.0.2	Online	  


 

 







No. of records per page: 5 1-1 of 1

Cloud ACC zkteco99 zkteco zkteco

< Person in This Device 🔄

SpeedFace-V4L Pro
Serial: 1
Zone: 1

Person & Person Credentials in This Device ? 🔄



Person Name	Person ID	Role	Person Credentials
Mike Mike	1	Select User role	           


No. of records per page: 5 1-1 of 1

Note: SpeedFace-V4L Pro Series does not support the palm verification method.


14 Connect the Wireless Doorbell★

This function needs to be used with the wireless doorbell.

First, power on the wireless doorbell. Then, press and hold the music button  for 1.5 seconds until the indicator flashes to indicate it's in pairing mode. After that, click on the SpeedFace-V4L Pro icon , if the wireless doorbell rings and the indicator flashes, it means the connection is successful.

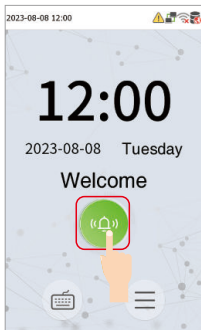

SpeedFace-V4L Pro

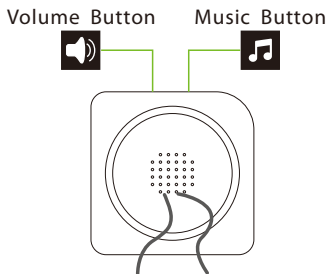

Wireless Doorbell

After a successful pairing, clicking the  icon of SpeedFace-V4L Pro will ring the wireless doorbell.

Note: Generally, each SpeedFace-V4L Pro connects to 1 wireless doorbell.

ZKTeco Industrial Park, No. 32, Industrial Road,
Tangxia Town, Dongguan, China.

Phone : +86 769 - 82109991

Fax : +86 755 - 89602394

www.zkteco.com

